

Operating instruction

-Auger jogger sends out 4 remotes standard but additional remotes are available. Up to ten remotes can be programmed to each control box.

-2 ways to turn the control box on and off

- 1) Hold the on/off switch on the control box for 3 seconds
- 2) Remote control powering- hold buttons I & II down for 3 seconds.

Optional Light feature-powering on and off

-To turn LED light on/off remotely press buttons I and II for 1 second and or press the control box light button.

-To swing the auger jogger press button I for direction A and press and hold button II for direction B

-Programming Instructions

Your auger jogger is preprogramed to use button I & II

Remote is capable of operating up to 3 auger joggers separately.

*See programming instructions

Remote programming instructions

Program remotes to auger jogger

Turn control box on

Press and hold program button and light button at the same time until LED light blinks red (control box is now in programming mode)

Press the desired Odd number button on each remote control you want to use.

*Control box allows for seven seconds during programming mode